1.1 Warranty and prevention of damage

Please read the operating instructions thoroughly before putting the machine into operation.


The operating instructions contain information about the proper use of and care for our products and will help preventing any breakdown of operations.

Marel Salmon disclaims any liability in connection with electrical installations made by the user, erroneous operation, incorrect use, constructional changes, removal of protective devices as well use of unoriginal spare parts and accessories.

In these cases, the user acts on his own behalf. If, in such a case, any damage occur, the user will be responsible.

No warranty claim can be made in case of natural wear and tear.

The user must have read and understood these operating instructions before operating the machine.

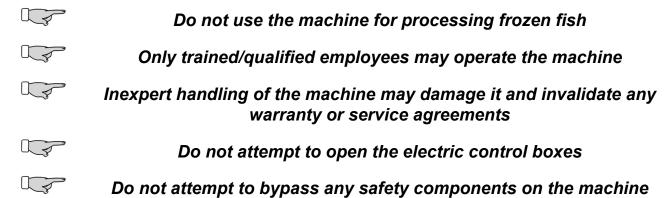

1.2 Specifications

Length	2350 mm 1600 mm
Motor output, motor for turning the roundtabel(frequency inv)	0.75 kW
Motor output, knifes of deheader(frequency inv)	
Motor output, knifes to cut the neck(frequency inv)	
Motor output, tale cutter(frequency inv)	
Motor output, drive for in feed 50 Hz	0,12 kW
Motor output, drive for in feed 60 Hz(US)	0,14 kW
Main frequency	
Main	3x400V + N/PE
Fuses	
Capacity	Ca. 15 stk/min 2 - 7 kg
At the sites, the energy equivalent, A-weighted sound pressure	
has been measured to	70dB(A) - 85dB(A)